

EUROPE'S LARGEST SELECTION OF TEST & MEASUREMENT EQUIPMENT FOR HIRE

INLEC.COM

DATA-SHEET



Nationwide Low Call
0333 6000 600

WHY BUY
WHEN YOU CAN HIRE

FLUKE®

922

Airflow Meter

Users Manual

PN 2683880

November 2006 Rev.1, 12/07

© 2006-2007 Fluke Corporation, All rights reserved. Printed in Taiwan. Product specifications are subject to change without notice. All product names are trademarks of their respective companies.

LIMITED WARRANTY AND LIMITATION OF LIABILITY

This Fluke product will be free from defects in material and workmanship for two years from the date of purchase. This warranty does not cover fuses, disposable batteries, or damage from accident, neglect, misuse, alteration, contamination, or abnormal conditions of operation or handling. Resellers are not authorized to extend any other warranty on Fluke's behalf. To obtain service during the warranty period, contact your nearest Fluke authorized service center to obtain return authorization information, then send the product to that Service Center with a description of the problem.

THIS WARRANTY IS YOUR ONLY REMEDY. NO OTHER WARRANTIES, SUCH AS FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSED OR IMPLIED. FLUKE IS NOT LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, ARISING FROM ANY CAUSE OR THEORY. Since some states or countries do not allow the exclusion or limitation of an implied warranty or of incidental or consequential damages, this limitation of liability may not apply to you.

Fluke Corporation
P.O. Box 9090
Everett, WA 98206-9090
U.S.A.

Fluke Europe B.V.
P.O. Box 1186
5602 BD Eindhoven
The Netherlands

Table of Contents

Title	Page
Introduction.....	1
Safety Information and Symbols.....	2
Contacting Fluke	4
Pushbutton Functions.....	5
Display	7
Using the Meter	9
Power	9
Measurement Units.....	9
Backlight	9
Automatic Power Off.....	9
Temperature	10
Secondary Menu Modes	10
Zero	10
Min Max Avg.....	10
Hold	11
Saving Samples	11

Measuring Differential Pressure	12
Measuring Velocity	14
Velocity Measurement	14
Measuring Flow	16
The Setup Menu	17
Clearing Sample Data	18
Recall	19
Maintenance	19
Cleaning.....	20
Replacing the Batteries.....	20
Specifications	22
Agency Approvals	24
Replacement Parts	24
Accessories and Optional Items	25

List of Tables

Table	Title	Page
1.	International Symbols.....	3
2.	Pushbuttons	6
3.	Display Description	8

List of Figures

Figure	Title	Page
1.	922 Airflow Meter	5
2.	Display	7
3.	Differential Pressure Measurement.....	13
4.	Pitot Tube Connection.....	15
5.	Replacing the Batteries.....	21

Introduction

The Fluke 922 Airflow Meter (“the Meter”) is a handheld instrument that measures differential pressure and calculates air velocity and air flow.

The Meter ships with the following items:

- Holster
- Carrying case
- Tubing and tubing strap
- Four AA Batteries (installed)
- Users Manual
- Wrist Strap

Safety Information and Symbols

A **⚠Caution** identifies conditions and actions that may damage the Meter. A **⚠Warning** identifies conditions and actions that pose hazard(s) to the user.

⚠⚠ Warning

To avoid injury, or damage to the Meter, follow these safety guidelines:







- **Read the entire Users Manual before using the Meter.**
- **Use the Meter only as described in the Users Manual or the protection provided by the meter may be impaired.**
- **Inspect the Meter before use. Do not use it if it appears damaged.**
- **The Meter contains no user-serviceable parts. Do not open the Meter. For service, the Meter must be sent to Fluke. See “Contacting Fluke”.**
- **Have the Meter serviced only by qualified service personnel.**
- **Adhere to local and national safety codes. Individual protective equipment must be used to prevent injury.**

⚠Caution

To avoid possible damage to the Meter, avoid using the Meter in an excessively dirty or dusty atmosphere. Excessive particle intake can damage the Meter.

International symbols used on the Meter and in the manual are explained in Table 1.

Table 1. International Symbols

Symbol	Description	Symbol	Description
	Risk of danger. Important information. Refer to manual.		Recycling information
	Battery		Conforms to Australian standards
	Conforms to EU directives		Do not dispose of this product as unsorted municipal waste. Contact Fluke or a qualified recycler for disposal.

Contacting Fluke

To contact Fluke, use one of the following telephone numbers:

USA: 1-888-99-FLUKE (1-888-993-5853)

Canada: 1-800-36-FLUKE (1-800-363-5853)

Europe: +31 402-675-200

Japan: +81-3-3434-0181

Singapore: +65-738-5655

Anywhere in the world: +1-425-446-5500

Or visit Fluke's Web site at: www.fluke.com.

Register the Meter at: <http://register.fluke.com>

Pushbutton Functions

Figure 1 and Table 2 explain the Meter's pushbuttons.

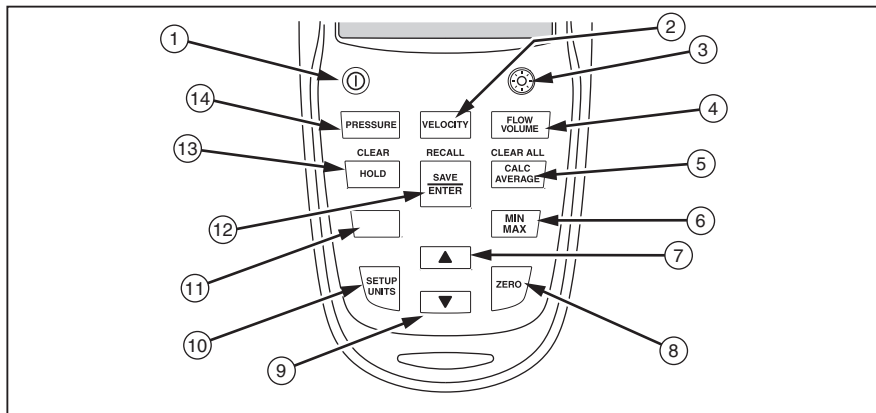


Figure 1. 922 Airflow Meter

eog02.eps

Table 2. Pushbuttons

Pushbutton	Function
①	Power button. Press to turn the Meter on or off. Hold for 5 seconds to display Meter's firmware version.
②	Activates velocity mode. See "Measuring Velocity".
③	Turns the backlight on and off.
④	Activates flow mode. See "Measuring Flow".
⑤	Calculates average of stored values.
⑥	Activates live Min Max Avg functions. See "Min Max Avg".
⑦	Used to increase manual inputs, scroll through memory, and to navigate the Setup menu.
⑧	Press and hold 2 seconds to zero out the display before taking readings.
⑨	Used to decrease manual inputs, scroll through memory, and to navigate the Setup menu.
⑩	Press to enter the Setup menu. See "The Setup Menu".
⑪	Used to access secondary features listed in yellow on the Meter.
⑫	Used to store data and accept changes to the setup menu and flow parameters.
⑬	Holds the present reading.
⑭	Activates pressure mode. See "Measuring Differential Pressure".

Display

Figure 2 and Table 3 describe the display.

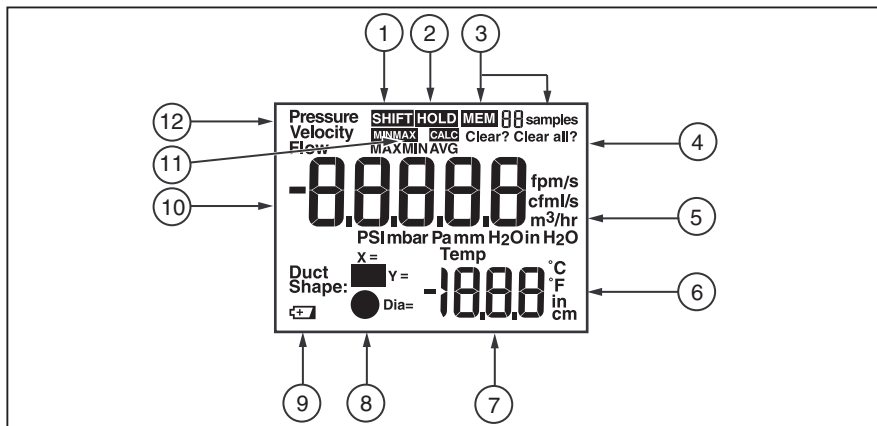


Figure 2. Display


eog01a.eps

Table 3. Display Description

①	Shift key is in use and secondary menu functionality is engaged
②	Hold is engaged
③	Annunciators showing that sample memory is being accessed and the number of samples
④	Indicates that a stored sample (or all samples) is about to be deleted from memory
⑤	Units of pressure, velocity, and flow
⑥	Units of length and temperature
⑦	Digits for temperature and setup parameters
⑧	Duct shape choices
⑨	Low battery indicator. Replace the battery as soon as the low battery indicator appears.
⑩	Digits for main measurements of pressure, velocity, and flow
⑪	Min Max and Hold indicators
⑫	Pressure, Velocity, or Flow modes are active

Using the Meter

Power

To turn Meter power on or off, press . Meter power is provided by four AA batteries. To replace the batteries, see “Maintenance”.

Measurement Units

The Meter supports both Metric and US measurement units. Select the desired measurement type using the Setup menu. See “The Setup Menu”.




Note

If any measured value of any parameter is above the specified range, the Meter shows “OL”.

Backlight

Press  to turn on the backlight. The backlight automatically turns off after 2 minutes.

Automatic Power Off

To conserve battery power, the Meter changes to sleep mode after 20 minutes of inactivity. To turn the Meter back on, press . To disable automatic power off, turn the meter on while simultaneously holding  and  until the display shows **APO OFF**. Repeat this procedure to re-enable this feature. The display shows **APO ON**.

Temperature

Ambient temperature is displayed on the Meter as a reference. The temperature can be displayed in either °C or °F. See "The Setup Menu".

Secondary Menu Modes

Use with other select pushbuttons to shift to secondary menu modes and functions:

- Press and then to access the Clear functions. See "Clearing Sample Data".
- Press and then to access the Recall menu. See "Recall".
- Press and then to access the Clear All function. See "Clearing Sample Data".



Zero


To zero differential pressure, velocity or flow, have both pressure ports open to ambient conditions, then, press and hold for 2 seconds. Upon zeroing, the meter beeps.

Min Max Avg



The Min Max mode stores live minimum (MIN) and maximum (MAX) input values. When the input drops below the stored minimum value or above the stored maximum value, the Meter beeps and stores the new value. Min Max mode also calculates an average (AVG) of all readings taken since the mode was activated. This mode can be used to capture

intermittent readings, record maximum and minimum readings while you are away or when you cannot watch the Meter.

To use Min Max mode, press . The maximum reading appears first. Each subsequent press of  steps through the minimum, average, and live readings, and back to the maximum reading.



To exit Min Max mode, press  for approximately two seconds. When in Min Max mode, the Auto-off feature is automatically disabled.

Hold

Pressing  captures the current reading and holds it on the display. If  is pressed while in Min Max mode, the reading is held on the display and Min Max mode continues to store minimum and maximum values.

Saving Samples

The Meter saves various samples in its three major modes. To save a sample, do the following:


1. When taking a sample, press  to store the sample. The Meter can save up to 99 samples in each of its three modes.
2. Once the samples are taken, press  to view the average of all the samples.

3. Press **CALC AVERAGE**, **PRESSURE**, **VELOCITY** or **FLOW VOLUME** to exit calculate mode. If the memory is full (99 samples have been stored), more samples cannot be stored. If the user attempts to store another sample, the Meter flashes "**Full**" and does not save new readings.

Measuring Differential Pressure

To measure differential pressure, do the following, see Figure 3:

1. Press **PRESSURE** to enter the pressure mode.
2. Connect a single hose to the "**Input (+)**" port, leaving the "**Ref (-)**" port unconnected.
3. With the tubing open to ambient conditions press and hold **ZERO** for 2 seconds.
4. Place the input hose in a different zone than the Meter.
5. The Meter displays the differential pressure of the input zone with respect to the reference zone. For instance, a positive reading means that the input zone is positively pressured with respect to the Meter location or its reference zone.

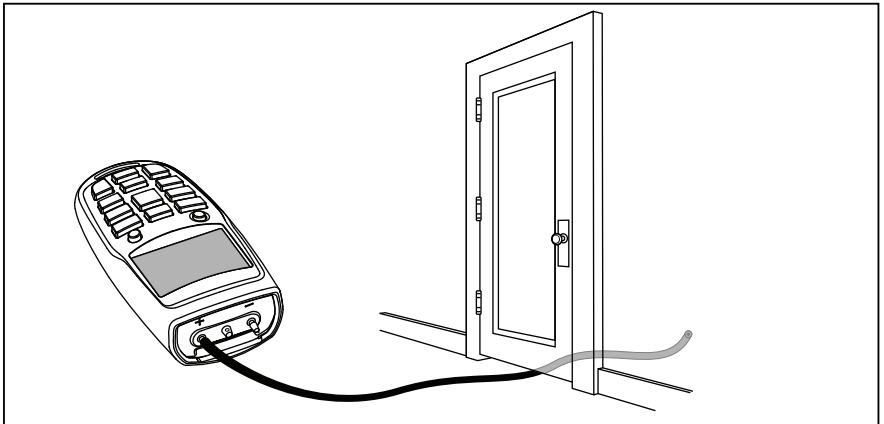

eog05.eps

Figure 3. Differential Pressure Measurement

Measuring Velocity

The Meter uses standard ambient conditions (temperature =21.1 °C/70 °F, barometric pressure = 14.7 psia / 1013 mbar), to approximate actual velocity and flow.

Velocity Measurement


To measure velocity, do the following:

1. Press **VELOCITY** to enter Velocity mode.
2. Connect the hoses to the pitot tube and to the Meter. The “**Input (+)**” pressure port on the Meter connects to the yellow hose from the total pressure connection of the pitot tube. The “**Ref (-)**” pressure port on the Meter connects to the black hose from the static pressure connection of the pitot tube. See Figure 4.

Note

If Measure Velocity measures negative on the display, check to make sure that the hoses are attached to the correct ports on the Meter and the pitot tube.



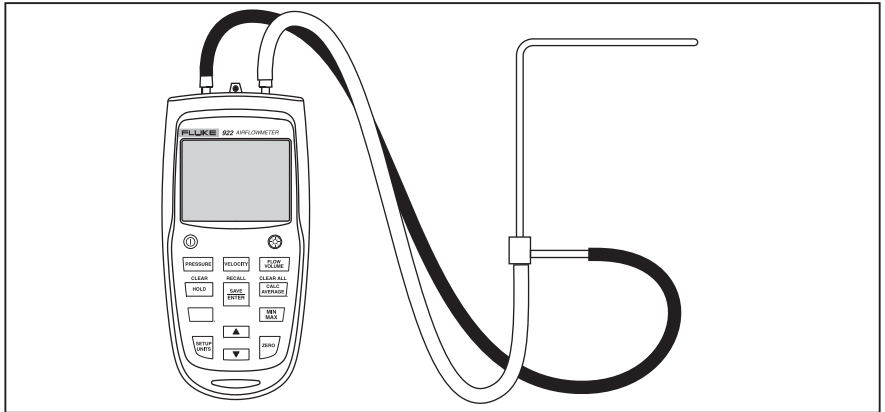












3. With the pitot tube open to ambient conditions press and hold **ZERO** for 2 seconds.



eog03.eps

Figure 4. Pitot Tube Connection

Measuring Flow

1. Press  .
2. The Meter requests the duct shape and size. The Meter stores the last duct shape and size that is entered. If the duct is different than the stored version, press  or  to find the proper duct type for the measurement (rectangular or round).
3. Press  to select the duct type.
4. If the duct is rectangular, use  and  to select the X dimension and press  to store it. Use  and  to select the Y dimension. Hold  or  to increase the rate of change. Press  to store it.
5. If the duct is round, use  and  to select the duct diameter and press  to store it.
6. To measure flow, refer to Steps 2 - 3 in "Measuring Velocity".

Note

If Measure Velocity measures negative on the display, check to make sure that the hoses are attached to the correct ports on the Meter and the pitot tube.

Notes

HOLD, SAVE, CALCULATE, SHIFT, MIN MAX, ZERO, and SETUP UNITS can be used when measuring pressure, velocity and flow.

*If **PRESSURE** or **VELOCITY** is pressed before pressing **SAVE/ENTER** for the final time, the Meter will escape the flow setup process and will not save any of the selections made or values entered.*






The Setup Menu

Use the Setup menu to change the following Meter parameters:


- Pressure units
- Velocity units
- Flow (Volume) units
- Temperature units
- Duct dimension units

To modify the Meter setup parameters:









1. From any screen, press **SETUP UNITS** to enter Setup menu editing mode.
2. Use **▼** and **▲** to change the measurement units. Hold down **▼** or **▲** to increase the rate of change.

3. Press  to store the change. The Meter beeps to signal that the change has been stored. With each press of , the menu moves to the next parameter. To exit the Setup menu without changing subsequent parameters, press , , or .



Clearing Sample Data

The Meter stores data that periodically will need to be cleared. Individual samples or the entire data memory can be cleared. When the memory is full (99 samples), it shows “Full” on the display when  is pressed and the Meter emits short beeps and will not save any value unless some samples are cleared.

To clear individual sample data, do the following:

1. Press either , , or  to clear samples for that mode.
2. Press .
3. Press  (CLEAR).
4. Use  and  to select the desired sample number. The last measurement saved appears first.
5. Press  to clear the sample. Note that the number of samples displayed is reduced.

To clear all sample data, do the following:

1. Press .
2. Press  (CLEAR ALL).

3. Press **SAVE ENTER** to clear all samples. The Meter beeps and the display shows 0 samples.
4. To exit (CLEAR) or (CLEAR ALL) without deleting samples, press **PRESSURE**, **VELOCITY**, or **FLOW VOLUME** before pressing **SAVE ENTER**.

Recall

1. Press either **PRESSURE**, **VELOCITY**, or **FLOW VOLUME** to recall samples for that mode.
2. Press **□**.
3. Press **SAVE ENTER** (RECALL) to recall samples. Use **▼** and **▲** to locate the desired sample. Hold **▲** or **▼** to increase the rate of change.
4. Press **PRESSURE**, **VELOCITY**, or **FLOW VOLUME** to exit the Recall menu.

Maintenance

This section provides basic maintenance information, including battery replacement instructions.

⚠ Caution

Do not attempt to repair or service the Meter unless qualified to do so and have the relevant calibration, performance test, and service information.



Cleaning

Clean only with soap and water. Remove any residue afterwards.

Periodically wipe the case with a damp cloth and mild detergent.


Do not use abrasives or solvents.

Replacing the Batteries

When the low battery symbol appears () the meter will not save samples and “bAtt” appears on the display when  is pressed.

The Meter uses four AA batteries (supplied). To replace the batteries, do the following (see Figure 5):

1. Turn off the Meter.
2. Remove the holster.
3. Place the Meter face down on a nonabrasive surface and loosen the battery door screw with a Phillips screwdriver.
4. Lift the battery access door away from the Meter.
5. Replace the batteries as shown in Figure 5. Observe the battery polarity shown in the battery compartment.
6. Secure the battery access door back in position with the screw.
7. Reinstall the Holster.

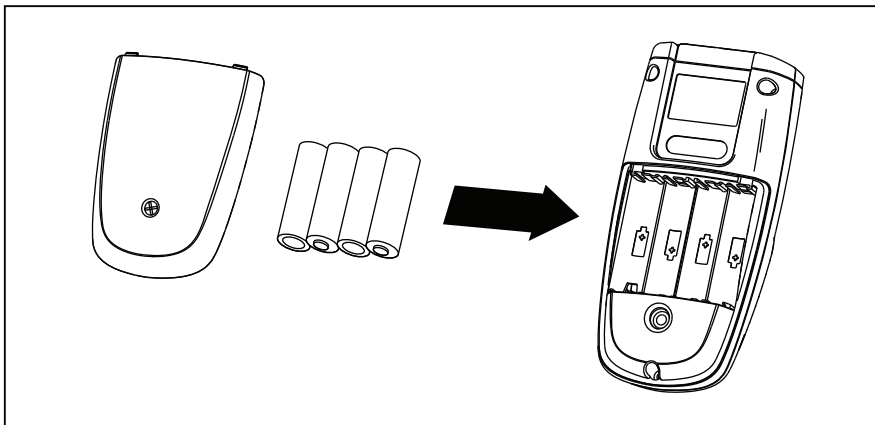

eog04.eps

Figure 5. Replacing the Batteries

Specifications


Parameter	Range	Accuracy	Resolution	Units Displayed
Air Pressure	± 4000 Pascal ± 16 in H ₂ O ± 400 mm H ₂ O ± 40 mbar ± 0.6 PSI	±1% + 1 Pascal ±1% + 0.01 in H ₂ O ±1% + 0.1 mm H ₂ O ±1% + 0.01 mbar ±1% + 0.0001 PSI	1 Pascal 0.001 in H ₂ O 0.1 mm H ₂ O 0.01 mbar 0.0001 PSI	Pa in H ₂ O mm H ₂ O mb PSI
Air Velocity	250-16,000 fpm 1-80 m/s	±2.5% of reading at 2000 fpm (10.00 m/s)	1 fpm 0.001 m/s	fpm m/s
Air Flow (Volume)	0-99,999 cfm 0-99,999 m ³ /hr 0-99,999 l/s	accuracy is function of velocity and duct size	1 cfm 1 m ³ /hr 1 l/s	cfm m ³ /hr l/s
Temperature	0 to 50 °C 32 to 122 °F	±1 % + 2 °C ±1 % + 4 °F	0.1 °C 0.1 °F	°C °F

Use of Zero function is required to achieve these specifications.

Airflow Meter
Specifications

Environmental	
Operating Temperature	0 °C to +50 °C
Storage Temperature	-40 °C to +60 °C
Temperature Coefficient	0.025 X (specified accuracy) / °C (< 18 °C or > 28 °C)
Relative Humidity: Non condensing (< 10 °C) 90 % RH (10 °C to 30 °C) 75 % RH (30 °C to 40 °C) 45 % RH (40 °C to 50 °C)(Without Condensation)	
IP Rating	IP40
Operating Altitude	2000 m
Storage Altitude	12000 m
EMI, RFI, EMC	Meets requirements for EN61326-1
Vibration	MIL-PREF-28800F, Class 3
Maximum Pressure at each Port	10 PSI

Agency Approvals

 Conforms to EU directives

 Conforms to Australian standards

Replacement Parts

Replacement Part	Part Number
Battery 1.5 V Alkaline Size AA (4) NEDA 15A, IECLR6	650181
Holster	2729807
Wrist Strap	2729793
Hoses, 1 black and 1 yellow w/test lead strap	2766087
Battery Door	2729818
Battery Door Screw	2729829
Hard Carrying Case	2774694
Users Manual	2683880
Users Manual on CD	2766430

Accessories and Optional Items

Description	Item or Part Number
Toolpak Meter Hanging Kit Includes: Magnetic Strip, 2 Straps (9 inch and 12 inch), 2 Latch Tabs	TPak
Fluke 922 Kit Includes: Fluke 922 Airflow Meter, 12 inch pitot tube, TPak Magnetic Strip, TPak Strap, 9 inches, TPak Latch Tab, Four AA Batteries 1.5 V Alkaline, Users Manual, Large Carrying Case	Fluke 922-Kit

INLEC, supporting you to deliver a world class service, every day, in every sector ...



OUR COMMITMENT TO YOU

A wealth of knowledge and experience.

You can take advantage of expert advice to ensure you get the best, most appropriate and cost effective equipment for the job. We supply a wide variety of industries, so if there is another way to do the job or save you time and money we'll pass on the benefit of our experience for free.

Honest advice, just a phone call away.

If we don't have a particular item, rather than hiring you something that won't do the job, we would rather direct you to an alternative supplier. You will always be provided with full instructions and if you still need help, call our technical team on Nationwide Low Call 0333 6000 600. Our aim is to save you time, frustration and money.

Top quality equipment from major manufacturers.

With Inlec you'll get the most accurate, reliable and well-maintained equipment available. Prices are regularly reviewed to ensure you always enjoy the best value for money. We have made a significant investment in test equipment so we ensure that it's well packed to minimise damage and delay.

We really do listen to you.

You won't waste your time contacting Inlec. Every request for equipment is logged and carefully considered. Listening to our customers helps keep our product range up to date and relevant. If you are unhappy about any aspect of our service please let us know so we can put it right.

YOUR 5 WAY GUARANTEE

1 GUARANTEE SAME DAY DESPATCH

We understand why prompt delivery is important to you. So, if we confirm your order before 3pm, you are guaranteed same day despatch.

2 OUR PRICE GUARANTEE

Inlec guarantee you real value for money. Our price match policy is simple - if you can hire the same product for less elsewhere, we guarantee to match that price and reduce it by a further 10% of the difference - and still deliver our industry leading technical and customer support.

For full details check our price-match guarantee online

3 TOP QUALITY GUARANTEED

All equipment is thoroughly checked prior to dispatch to ensure you receive it in full, safe working order. Your shipment will be securely packed and include manufacturer's instructions, accessories or consumables and a valid calibration certificate where appropriate. In addition, Inlec offer a 24 hour replacement service if you decide the equipment is not suitable for your application*.

4 FRIENDLY, KNOWLEDGEABLE ADVICE GUARANTEED

Inlec are happy to provide you with free advice, from an unbeatable team of experienced, knowledgeable and friendly engineers and hire experts.

5 YOUR GUARANTEE OF THE BEST CUSTOMER SERVICE

Throughout your hire we will work hard to ensure you enjoy the very best in support and service from Inlec. We guarantee you won't find better service anywhere in the industry.

*subject to availability and conditions

Europe's leading Test Equipment Hire Specialist



LAB NO. 0535



Nationwide Low Call 0333 6000 600

Online: www.inlec.com

Inlec UK Ellerbeck Way, Stokesley Business Park, Stokesley N Yorkshire TS9 5JZ United Kingdom



CERT. NO. GB93/1773



Accredited Contractor