

Datasheet



0370 330 6021 www.sunbeltrentals.co.uk

NETSCOUT.

AirCheck G2 Wireless Tester

Wi-Fi is a complex technology, but testing it doesn't have to be. AirCheck™ G2 Wireless tester is purpose built for the front-line IT responders dispatched to the complaints of: The Wi-Fi is not working or the Internet is down. The AirCheck G2 Wireless Tester provides fast, simple, and accurate isolation and troubleshooting, thereby reducing the time to resolution of wireless issues.



There are many variables that lead to Wi-Fi complaints, ranging from networkbased problems and configuration issues to environmental or client device misconfigurations. Collecting all the key pieces of information the very first time is key to every front-line IT responder to resolve any complaint. AirCheck G2 simplifies wireless troubleshooting by providing:

- A rugged, purpose-built wireless tester supporting the latest Wi-Fi technologies (802.11a/b/g/n/ac) that's easy to use and easy to carry
- A one-button AutoTest, which quickly provides a pass/fail indication of the wireless environment and identifies common problems for any level of Wi-Fi expertise
- An instant view of test results including network availability, connectivity, utilization, rogue devices, and interference detection
- A centralized test results management platform, Link-Live, that facilitates greater job visibility, project control and fleet management for larger distributed environments

Datasheet: AirCheck G2 Wireless Tester | NETSCOUT

The intuitive user interface and management platform provides actionable intelligence to not only remove the complexity of wireless troubleshooting but also helps speed up closure of the trouble ticket. The cost of not getting the job done right the first time, leads to ineffective usage of the escalation team efforts and end-user dissatisfaction due to slow problem-solving response time. AirCheck G2 provides front-line IT with complete and accurate wireless information to solve problems right the first time, instead of blindly escalating them.

Overview

AirCheck G2 integrates all Wi-Fi technologies plus interference detection, channel scanning, and connectivity tests. The one-button AutoTest and instant access to detailed information provides fast troubleshooting for the most common Wi-Fi pain points, including:

- Coverage problems
- Overloaded networks or channels
- Channel interference
- Connectivity problems
- Failed access points
- Rogue access points
- Client problems
- Unauthorized Clients





AirCheck G2 Features

Supports 802.11a/b/g/n/ac — All-in-one handheld tool for all Wi-Fi technologies including true 802.11ac 3x3 support.

Instant-on operation — Powers up fast and automatically starts discovering networks, access points (APs), and channel activity.

Touchscreen Display — 5" Touchscreen display allows for better visibility and easier access to all the available operations/inputs.

Get answers fast — The one-button AutoTest quickly provides a pass/fail indication of the wireless environment and identifies common problems — for any level of Wi-Fi expertise.

Link-Live Cloud Service — Cloud-based results management dashboard provides test results, project control, and reporting capabilities for your network connectivity tests.

Identifies security settings for each Network and Access Point — Open, WEP, WPA, WPA2, and/or 802.1x.

Datasheet: AirCheck G2 Wireless Tester | NETSCOUT

Pinpoints Wi-Fi traffic and interference — Shows how much of each channel's bandwidth is consumed by 802.11 traffic and interference, and the APs using each channel.

Finds rogue APs and misbehaving clients — Flags unauthorized APs and clients. Hunt them down with the LOCATE function or find them even faster with the optional directional antenna. Supports use of a USB headset for audio feedback.

Connection tests — Connects to networks or specific APs using WEP, WPA, WPA2, and/or 802.1x. Acquires an IP address and pings the router, gateway, and user-defined addresses to verify connectivity and network access inside and outside the firewall. Verifies connection quality.


Wired Ethernet Tests — Allows for quick AP backhaul and wiring verification.

Designed for the field — Multi-hour battery life. One-handed operation. Rugged design.

AirCheck G2

AutoTest — Performs the following five essential Wi-Fi tests and a pass/fail indication of the wireless environment as well as identifies common problems — for any level of expertise.

- **802.11 Utilization** Reports the top three channels in each band (2.4 GHz and 5 GHz) with the highest 802.11 Wi-Fi traffic airtime utilization.
- Non-802.11 Utilization Reports the top three channels in each band (2.4 GHz and 5 GHz) with the highest non-802.11 airtime utilization. This indicates the presence of interference sources and high-noise levels.
- **Co-Channel Interference** Reports the top three channels in each band (2.4 GHz and 5 GHz) with the most APs on the same channel that exceed the minimum signal level threshold. It accounts for 40-MHz and 80-MHz channels in the 5-GHz band by counting an AP on its primary and each secondary channel. Then view a list of the APs counted for co-channel interference.
- Adjacent Channel Interference Reports the top three channels in the 2.4 GHz band in which APs may experience Adjacent Channel Interference. For each channel on which at least one AP is found, the Tester counts how many APs are operating on other channels that overlap with that channel. It accounts for 20-MHz and 40-MHz channels in the 2.4-GHz band. Then view a list of the APs counted for adjacent channel interference.
- **Network Quality** Verifies coverage, interference, security and ability to connect to specified networks, along with the availability of critical network services such as DHCP and connectivity to specified network targets.

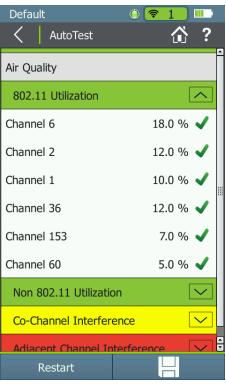

AutoTest UI

Default [*]			? 3	
<	Networks (33	3)		?
Sort: Signal Streng	th		1	↓ ^{Filter}
Snacker	sPV-2g			
-37	1	SNR:	46 dB	
Snacker	s_CO_2.4G			
-41	1	SNR:	45 dB	
Cisco44	00			
-43	4	SNR:	40 dB	
NSVisito	or			
-43 🖬	10	SNR:	44 dB	
ngenius	&sniffer			
-43 🔂	10	SNR:	44 dB	
[Hidden	- Cisco:e7:	9b:01	L]	
44			- 39 dB	
EA6500	TAC_24G			
-46	0	SNR:	40 dB	
Enterpri	ise24			
	\Box			

Networks UI

Datasheet: AirCheck G2 Wireless Tester | NETSCOUT

Networks

Quickly view all the networks present in the environment, and see critical parameters for each one including signal level, signal/noise ratio, security type, and number of access points. Find common issues such as mixed security types, poor signal coverage or lack of secondary AP coverage.

Sort or filter on any parameter. Then drill into more details for any network, including 802.11 types supported, number of connected clients, channels and more. From the network details page, drill into a list of APs or clients on the network.

Access Points

Quickly view all the APs present in the environment, and see critical parameters for each one including signal level, signal/noise ratio, security type, and channel. Find common issues such as incorrect security type, poor signal coverage or incorrect channel.

Sort or filter on any parameter. Then drill into more details for any AP, including number of connected clients, supported rates, 802.11n and 802.11ac capabilities and more. From the AP details page, drill into a list of connected clients or the channel on which the AP operates to verify any channel utilization or co-channel interference problems.

Channel Usage

Quickly determine if channels are over-utilized with 802.11 Wi-Fi traffic and/or with non-Wi-Fi interference and noise. Devices that can cause interference include microwave ovens, wireless game controllers, Bluetooth® devices, ZigBee devices and wireless video cameras.

Drill in to see the level of Wi-Fi traffic and interference over the last 60 seconds on a selected channel, as well as the access points and clients using this channel.

Clients

Quickly view all the client devices that are connected to a network or probing for one. See critical parameters for each one including signal level, channel and connected AP. Find common issues such as clients connected to the wrong AP or unrecognized client devices connected to the network.

Sort or filter on any parameter. Then drill into more details for any client, including connection rate and security type. From the Client details page, drill into the connected channel or quickly locate the client device.



Networks UI Detail

Def	faul	t		<u></u>	9
<		Acce	ess Point	s (58)	合?
Sort: Signal	Stre	ngth			↑ ↓ Filter
TRE	NC	n:af:	1e:32		
-34		SNR:	53 dB	Channel:	6
Lnk	sys	:92:a	9:d6		
-39	•	SNR:	48 dB	Channel:	161
Lnk	sys	:92:a	9:d7		
-39	•	SNR:	48 dB	Channel:	3
Lnk	sys	:92:a	9:d9		
-39	2	SNR:	49 dB	Channel:	3
TRE	NC	n:af:	1e:28		
-39	•	SNR:	49 dB	Channel:	6
TPL	ink	:31:9	9:9a		
-43	•	SNR:	45 dB	Channel:	6
Cisc	:01	130-:	LNort		
-45	2	SNR:	41 dB	Channel:	11
Asu	sTł	c:75:9	93:c0		
		\bigcirc			
		\sim			

Access Points UI

Datasheet: AirCheck G2 Wireless Tester | NETSCOUT

Locate Access Points and Clients

Track down rogue APs and unauthorized clients by following the real-time signal level meter and graph over time. Audible indication is provided, and the use of a USB headset for private audio is supported.

Drill in to see the level of Wi-Fi traffic and interference over the last 60 seconds on a selected channel, as well as the access points and clients using this channel.

Connect

Verify network availability and access to critical services by connecting to a network (SSID) or AP with a single touch on the Connect button. Key test steps include:

- Associate to an AP
- Request and receive an IP address from a DHCP server
- Ping the default gateway and DNS servers for availability
- Perform a ping or TCP port test to up to ten network targets
- Ongoing signal level, signal/noise ratio, and retry rate measurements

Once connected to a network, perform a roaming test to validate that roaming is enabled on the network.


Ethernet Tests

Access points must have a working backhaul connection to the network, and the AirCheck G2's built-in Ethernet test validates that.

Diagnose and test Power over Ethernet (PoE), Link to the switch, DHCP, Gateway, and Internet connection. Get VLAN, switch name, and port information via CDP/LLDP/EDP for your managed switches. Automatically upload results to Link-Live Cloud Service, and receive test results sent directly to your email.


Default	۵ (? 36) 💷 🗧
< 06:32	2:02:1a:d6:79	Â	?
BSSID	06:32:02	2:1a:d6	5:79
Security		WPA2	\mathbf{r}
802.11 Types		a 1	ac
Supported Rat	tes (Mbps)		
6,	11, 12, 18, 24	, 36, 48	, 54
Clients			0
Band		5 (GHz
Channels	36P, 80 N	1Hz, 36	-48
Last Seen	0 se	conds	ago
802.11n Capa	bilities		\checkmark
802.11ac Cap	abilities		
Locate	Connect		

Access Points UI Detail

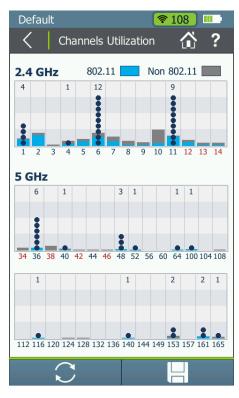

Channel Utilization UI

Datasheet: AirCheck G2 Wireless Tester | NETSCOUT

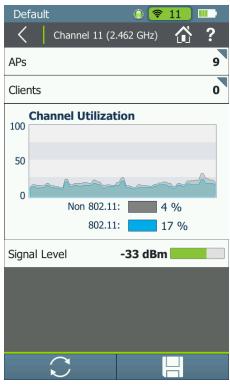

Channel Utilization UI Detail

Intel:af:bc:f2

Default

Signal Strength

Signal Level

<

SSID

AP Name

AP BSSID

Security

Band

Channel

Last Seen

Probes On

802.11 Type

Defau	t		🛜 104 💷 🖿
<	Clients ((11)	☆?
Sort: SSID			↑ _↓ _{Filter}
-74	Channel:		
NetSc	::c2:00:e	6	
-61 🔂	Channel:	1	Aruba_PV
NetSc	::a4:56:6	ia	
-51 🖬	Channel:	140	Cisco4400
NetSc	::a4:70:5	53	
-74 🗖	Channel:	116	Cisco4400
HTC:e	6:68:98		
-65 🖬	Channel:	11	Cisco4400
Intel:	:b:9d:a2		
-63 🖬	Channel:	11	Cisco4400
Intel:4	le:0e:cc		
-74 🖬	Channel:	60	ngenius&sniffer
Intel:8	d:cb:bc		
-66	Channel:	153	Studio2020
	\square		
	\sim		



-60 dBm

 $\mathbf{\hat{m}}$

NSVisitor

lap-cos-us-2

Cisco:50:dd:be

WPA2

0 seconds ago

a

5 GHz

44

+

Defau	lt ┥ 🌔	<u>≈ 6</u>
<	Locate TRENDn:af:1e:28	谷 ?
BSSID	TREN	IDn:af:1e:28
Last Se	en	00:00.076
	-70 -60 -50 -40 -90 -90 -90 -90 -90 -90 -90 -90 -90 -90	-30 -20 -10 0
	Signal Strength (dl	3m)
0		
-50	- Marine	har h
-100		
	Signal Strength:	-57 dBm
	∢ ×	ľ

Client UI Detail

Locate UI

Datasheet: AirCheck G2 Wireless Tester | NETSCOUT

Default	হি140* Ⅲ
Connect to Ci	isco4400 🟠 ?
Connection Establish	ed 🔽 🗖
IP Address	10.250.8.228 🔽
Gateway Found	10.250.8.1 🔽
DHCP Server Found	10.250.8.2 🔽
DNS 1 Found	10.250.3.221 🔽
DNS 2 Found	10.200.72.11 🔽
Target Found w	ww.google.com 🔽
PHY Data Rate	54 Mbps
Signal Level	-53 dBm
Noise Level	-99 dBm
SNR	46 dB
Roaming Test L	.og

Connect to SSID UI

Def	ault Roaming Tes	● <mark>≈ 11*</mark> ■■ t
AP I	Name	Cisco1130-1Nort
Targ	jet	Default Gateway
Ping	Stats	1% Loss 🔽
Con	nection Range	<u> </u>
100 50 0		
0	Quality Rating	: 20 %
PHY	Data Rate	11 Mbps
Sign	al Level -	43 dBm
Nois	e Level -	96 dBm
	Stop	Log


Roaming UI

Default		₹ 14
< Et	hernet Test	企 ?
PoE	Found	d, 50.2 Volts
Link	100	0 Mbps/FDx 🔽
Port	COS_DEV_S	W1.fnet.eng 🔽
DHCP		10.250.3.24 🗸
Default Gat	eway	10.250.0.1 🔽
Network	www	.google.com 🔽
Upload Res	ults to Link-Liv	/e 🔽
Restart	DHCP Lo	g 🛛 🕂

Ethernet Test UI

Link-Live Cloud Service

Once the AirCheck G2 is connected to the Link-Live Cloud service, basic network connectivity test results are automatically uploaded to the dashboard for project management and reporting. This internet-hosted service is available from anywhere at any time using any device with a browser and internet connection. It is especially useful for managers of remote teams that need visibility to test results instantly. In addition, teams that utilize the wired-only companions to the AirCheck G2 such as the LinkSprinter, or LinkRunner, or OneTouch AT have a single dashboard system to manage results from network connectivity tests.

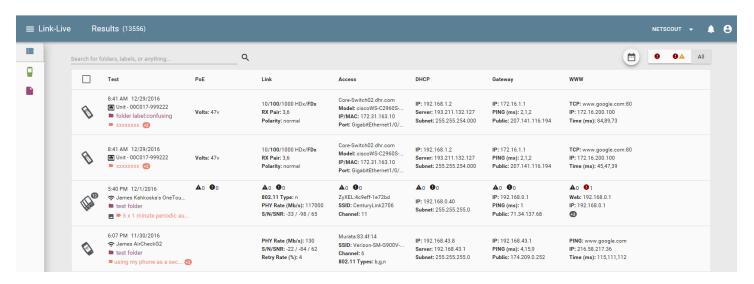

Link-Live dashboard

AirCheck G2 Manager Software


The AirCheck G2 Manager Software provides the ability to manage AirCheck G2 profiles and view detailed information on saved tests results. The software is free and available for download to any computer from the Link-Live Cloud Service.

Profiles

Easily configure, manage, and control the use of your AirCheck G2 — or an entire fleet of them — with the Profiles feature, which allows configuration of security settings, AutoTest limits, and target devices for connectivity. Name and transfer multiple profiles into AirCheck G2, as needed for different facilities. Profiles are password protected, eliminating worry about unauthorized access to your network if your AirCheck G2 is lost or stolen.

Record Sessions

You can easily view detailed information about networks, access points, channels, or clients on the AirCheck G2 Manager Software by viewing a saved session file. The session files will capture details including AirCheck G2 configuration, AutoTest results, lists of AP's / clients and channel usage.

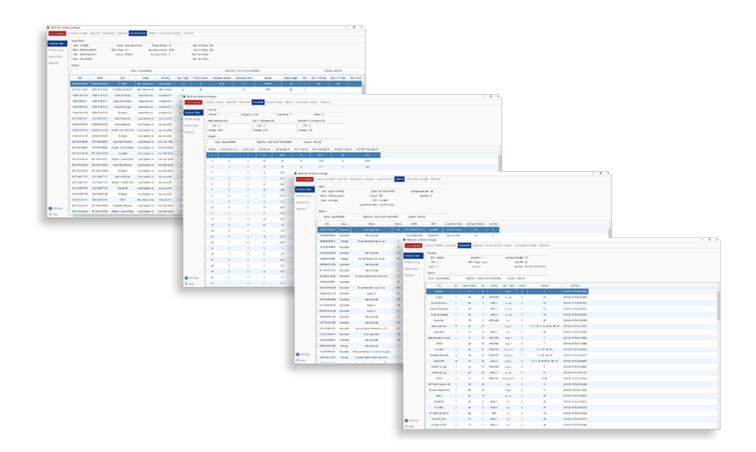

AirCheck G2 Manager dashboards

Ordering Guide

Model Number	What is Included
AIRCHECK-G2	AIRCHECK-G2 WIRELESS TESTER
AIRCHECK-G2-KIT	AIRCHECK-G2 PLUS EXTERNAL DIRECTIONAL ANTENNA, AUTO CHARGER, HOLSTER
ACKG2-LRAT2000	NETWORK TECH TROUBLESHOOTING KIT W/AIRCHECK-G2, LRAT-2000 and accessories
ACKG2-HOLSTER	AIRCHECK-G2 HOLSTER
ACKG2-WBP-LION	AIRCHECK-G2 LITHIUM-ION REPLACEMENT BATTERY
EXT-ANT-RPSMA	EXTERNAL DIRECTIONAL ANTENNA, RP-SMA CONNECTOR
PWR-CHARGER	AC CHARGER REPLACEMENT
SOFTCASE-G2	SOFTCASE
ACKG2-LRAT2000-1YS	1 Year Gold Tools Support for ACKG2-LRAT2000
ACKG2-LRAT2000-3YS	3 Year Gold Tools Support for ACKG2-LRAT2000
AIRCHECK-G2-KIT-1YS	1 Year Gold Tools Support for AIRCHECK-G2-KIT
AIRCHECK-G2-KIT-3YS	3 Year Gold Tools Support for AIRCHECK-G2-KIT
AIRCHECK-G2-1YS	1 Year Gold Tools Support for AIRCHECK-G2
AIRCHECK-G2-3YS	3 Year Gold Tools Support for AIRCHECK-G2

General Specification	S
Dimensions	3.8 in x 7.7 in x 1.6 in (9.7 cm x 19.6 cm x 4.1 cm)
Weight	18 oz (0.51 kg)
Battery	Rechargeable lithium-ion battery pack (3.6 V, 6 Ah, 21 Wh)
Battery life	Typical operating life is 4.5 hours. Typical charge time is 7 hours
External AC adapter/charger	AC input 85-264 Vac 47-63 Hz input power DC output 15 Vdc at 2 amps
Display	5.0-inch color LCD with capacitive touch screen (480 x 800 pixels)
Keypad	1-key elastomeric (power only)
Host Interface	1x micro USB Type B port
Adjunct Interface	2x USB 2.0 Type A port
Wireless antenna	3x Internal
External antenna port	Input only. Reverse-polarity SMA connector
Environmental Specif	ications
Operating temperature	32°F to 113°F (0°C to +45°C) The battery will not charge if the internal temperature of the tester is above 122°F (50°C)
Operating relative humidity (% RH without condensation)	90% (50°F to 95°F; 10°C to 35°C) 75% (95°F to 113°F; 35°C to 45°C)
Storage temperature	-4°F to 140°F (-20°C to +60°C)
Shock and vibration	1 m drop test, Random, 3.8 g, 5 Hz-500 Hz
Safety	IEC 61010-1: Pollution degree 2
Altitude	4,000 m; Storage: 12,000 m
ЕМС	IEC 61326-1: Basic Electromagnetic Environment; CISPR 11: Group 1, Class A
Wireless Specificatior	ns
Specification compliance	IEEE 802.11a, 802.11b, 802.11g, 802.11n, 802.11ac
Wi-Fi Connectivity	802.11a, 802.11b, 802.11g, 802.11n, 802.11ac
Operating frequencies These are the center frequencies of the channels that the AirCheck G2 tester supports.	Frequencies of channels received: The tester receives on all of the frequencies in every country. 2.4 GHz band: 2.412 - 2.48 GHz (channel 1 to channel 14) 5 GHz band: 5.170 - 5.320 GHz, 5.500 - 5.700 GHz, 5.745 - 5.825 GHz (channels 34, 36, 38, 40, 42, 44, 46, 48, 52, 56, 60, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140, 144, 149, 153, 157, 161, 165) Frequencies of channels transmitted: The tester transmits only on the frequencies allowed in the country where it is operating 2.4 GHz band 802.11b: 2.412 - 2.484 GHz (channel 1 to channel 14) 802.11g/n; 20 MHz BV (HT20): 2.412 - 2.472 GHz (channel 1 to channel 13) 802.11n; 40 MHz BW (HT40): 2.422 - 2.462 GHz (includes all combinations of legal, bonded pairs of channels)
Wi-Fi Antennas	
Internal Wi-Fi antennas	Three internal 2.4 GHz, 1.1 dBi peak, 5 GHz, 3.2 dBi peak antennas.
External directional	Antenna, frequency range 2.4 - 2.5 and 4.9 - 5.9 GHz.

http://enterprise.netscout.com/edocs/datasheet-aircheck-g2-wi-fi-tester

Datasheet: AirCheck G2 Wireless Tester | NETSCOUT antenna Minimum gain 5.0 dBi peak in the 2.4 GHz band, and 7.0 dBi peak in the 5 GHz band. Reverse SMA External antenna connector¹

¹External antenna port is receive-only (no transmit).

AirCheck Manager Software			
Supported operating systems	Windows 7, Windows 8.1, Windows 10		
Processor	400 MHz Pentium processor or equivalent (minimum); 1 GHz Pentium processor or equivalent (recommended) RAM 96 MB (minimum)		
RAM	256 MB (minimum); 512 MB (recommended)		
Hard disk	Up to 500 MB of available space may be required		
Display	1280 x 1024 high color, 32-bit (recommended)		
Hardware	USB Port		

Certifications and Compliance

CE	Conformite Europeene. Conforms to the requirements of the European Union and the European Free Trade Association (EFTA).
\bigotimes	The product complies with Australian standards.
	Listed by Canadian Standards.
FC	Complies with 47 CFR Part 15 requirements of the U.S. Federal Communications Commission.
anatel	Certified by the National Agency of Telecommunications (Anatel).
	Conforms to relevant South Korean EMC Standards.

Additional South Korean EMC Standards Information

Electromagnetic Compatibility. Applies to use in Korea only. Class A Equipment (Industrial Broadcasting & Communications Equipment)

[1] This product meets requirements for industrial (Class A) electromagnetic wave equipment and the seller or user should take notice of it. This equipment is intended for use in business environments and is not to be used in homes.

We are supporting you to deliver a world class service, every day, in every sector...

LOCATIONS

LONDON, HEATHROW

Sunbelt Rentals UK Test & Monitoring 242-252 London Road, Staines, London TW18 4JQ 0333 122 3126 www.sunbeltrentals.co.uk/find-a-depot/london-heathrow

REDCAR

Sunbelt Rentals UK Test & Monitoring Unit 5 Kirkleatham Business Park, Redcar TS10 5SQ 0370 330 6021 www.sunbeltrentals.co.uk/find-a-depot/teesside

STOKESLEY

Sunbelt Rentals UK Test & Monitoring 2 Ellerbeck Way, Stokesley Business Park, Stokesley, North Yorkshire TS9 5JZ 01642 718 900 www.sunbeltrentals.co.uk/find-a-depot/stokesley



www.inlec.com

Order Online with Next Day Delivery, Online Chat & Online Account Management



★ Trustpilot

View our trustpilot score \star \star \star

• HEATHROW



