

**TROLEX**

# **COMPLIANCE PACK<sup>+</sup>**

## **QUICK START GUIDE**

Register your warranty online  
at [www.trolex.com/register](http://www.trolex.com/register)

P5650.1604\_Rev A

**XXD1<sup>+</sup>**

## 1. XKD1+ REQUIRES COMPLIANCE CHECK

The flashing lights shown and an intermittent audio beep tell you your **XKD1+** is ready for a compliance check.



TROLEX

# BreathELITE

© Trolex LTD  
All Rights Reserved

## 2. DOWNLOAD

Download the **BreathELITE** software on to your Mac or PC device.

 [trolex.com/breathelite-download](https://trolex.com/breathelite-download)

### 3. CONNECT

Connect your **XCD1+** directly to your computer using the USB cable.



### 4. COMPLIANCE BASE

Place your **XCD1+** in a Trolex compliance base ready for the compliance check.

Ensure the clear hood is fitted over the top and the unit is connected to your computer.


## 5. PREPARE SAMPLE

Decant the Trolex approved sample into the application bottle.



## 6. START YOUR CHECK

Select "Compliance check" on **BreatheLITE**.

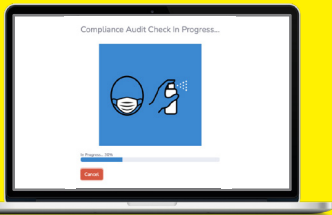

## 7. SAMPLE

Introduce sample and follow the on-screen instructions.



## 8. PASSED

Great, you're good to go for another 3 months.

\*Please consult the user manual if you need to retest your **XCD1<sup>+</sup>**.



## 9. DON'T FORGET

You can order more compliance samples through your local approved distributor.



 [trolex.com/product/xd1+](https://trolex.com/product/xd1+)



Scan the QR code  
to find your local  
Trolex partner.